

TRAFFIC RANGE

EASY ACCESS TC RANGE VIDEO SURVEILLANCE /CCTV

Thanks to a manual winch located inside the shaft, at the level of the inspection hatch, the mast head will slide all the way down to the foot. The manoeuvre takes place along a profiled rail. The cabling also passes through the rail. A special lockable cover protects the electrical wiring from attacks.


Diagram of mast head (example)

Manual winch


Exists in version 8, 10 or 12 meters



Manual winch
Stainless steel cable

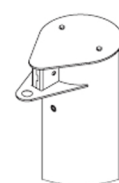

Removable
head
support

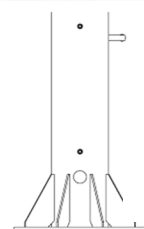

Stiffening
gussets

Antiresonance base plate



CRAL colour palette



Options upon request